Clarion®

Quick Reference Guide

N.I.C.E. 430

Portable Navigation System

NICE430QuickReference.indd 1 2/2/2007 1:03:32 PM

English

1. GETTING STARTED

Components

Included accessories

Mounting pad

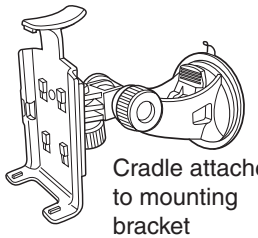

Cradle attached to mounting bracket

Vehicle charging cable

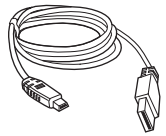

USB cable

Optional accessories

- External antenna for better satellite reception
- Traffic Message Channel (TMC) module (NAVRDS) for receiving radio transmissions concerning traffic, weather, and other driving conditions
- Secure Digital and MultiMediaCard storage cards

Charging the battery using a computer

Before using the N.I.C.E. 430, completely charge the battery.

1. Turn on your computer.
2. Plug in the mini-USB end of the Universal Serial Bus (USB) cable to the USB connector on the bottom edge of the N.I.C.E. 430.
3. Plug the other end into a USB port on your computer. The charge indicator glows red, indicating the battery is charging.

NICE430QuickReference.indd 2-3 2/2/2007 1:03:37 PM

English

When the charge indicator glows green, the battery is fully charged.

Powering on and off

1. The first time you use the N.I.C.E. 430, press and hold the power button (⏻) for six seconds. This is necessary because the unit's power is off. The N.I.C.E. 430 displays the main menu.

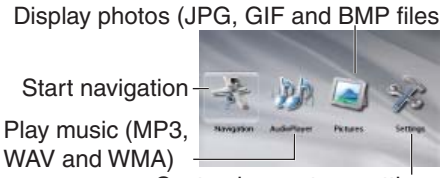

English

After the first time, briefly press to enter "sleep mode." Press power briefly again to turn the power fully on.

To fully power off, press and hold the power button until the Bluetooth indicator flashes blue one time.

2. Remove the stylus from its storage compartment.

Selecting the language and setting the time

These steps are required the first time you use the N.I.C.E. 430.

1. Tap **Settings** > **Language**.

   The Switch Language screen appears.

2. Select the language from the drop-down menu and tap the check mark button to save your selection.
3. Tap **Date/Time**. The Date/Time screen appears.

4. Use the arrows to select the time zone.

   GMT-5 Eastern US
   GMT-6 Central US
   GMT-7 Mountain US
   GMT-8 Pacific US
   GMT-9 Alaska
   GMT-10 Hawaii

5. Use the arrows to set the date and current time.
6. Tap the check mark button to save your selections. The Main menu appears. The device is ready to use.

NICE430QuickReference.indd 4-5 2/2/2007 1:03:38 PM

English

2. NAVIGATING

You may use the N.I.C.E. 430 to navigate while you drive by mounting it in a vehicle or as a pedestrian by holding it in your hand.

Attaching the mounting bracket to the vehicle

CAUTION

Position the mounting bracket where the N.I.C.E. 430 will not block the driver's field of vision.

1. Based on where you plan to mount the bracket, attach the cradle to the mounting bracket.

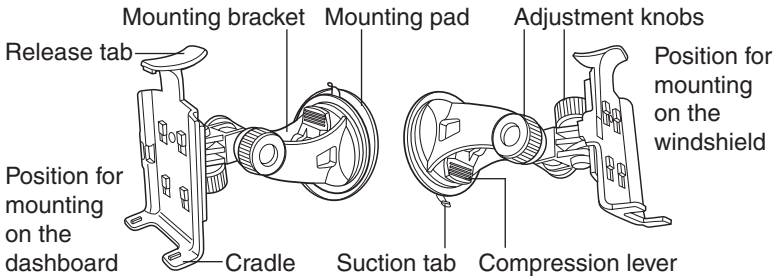

English

2. If mounting on the dashboard, remove the backing on the mounting pad and attach the pad to the dashboard. If mounting on the windshield, you don't need the mounting pad.
3. Place the mounting bracket in position with the suction cup touching the mounting pad or the windshield.
4. Press the compression lever.
5. Use the adjustment knobs as needed.

Removing the mounting bracket

1. If the power cord is connected, disconnect it from the USB port on the N.I.C.E. 430.
2. Hold the mounting bracket and cradle, then lift the lever.
3. If the mounting bracket and cradle do not drop away from the mounting pad or windshield, gently pull on the suction tab.

Removing the N.I.C.E. 430 from the cradle

To remove the N.I.C.E. 430 from the cradle, press on the release tab.

NICE430QuickReference.indd 6-7 2/2/2007 1:03:39 PM

English

Charging the battery in the vehicle

CAUTION

To protect the N.I.C.E. 430 from receiving a sudden surge of current, start the ignition before plugging into the cigarette lighter.

1. Start the vehicle's ignition.
2. Plug in the mini-USB end of the Vehicle charging cable into the USB connector on the bottom edge of the N.I.C.E. 430.

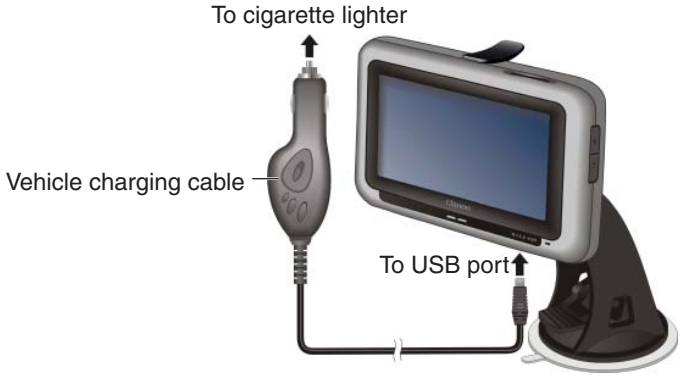

3. Plug the other end into the cigarette lighter.

Navigating to a destination

1. Tap the navigation icon on the Main menu. It takes approximately 10 seconds to load the map and display the navigation menu.

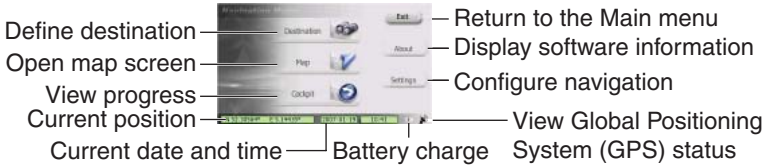

2. Tap **Destination**. The N.I.C.E. 430 displays the Find menu.

3. Tap **Address** or **POI** (point of interest) and define the location. When you're finished, the N.I.C.E. 430 displays the map.

English

NICE430QuickReference.indd 8-9 2/2/2007 1:03:39 PM

English

Map screens

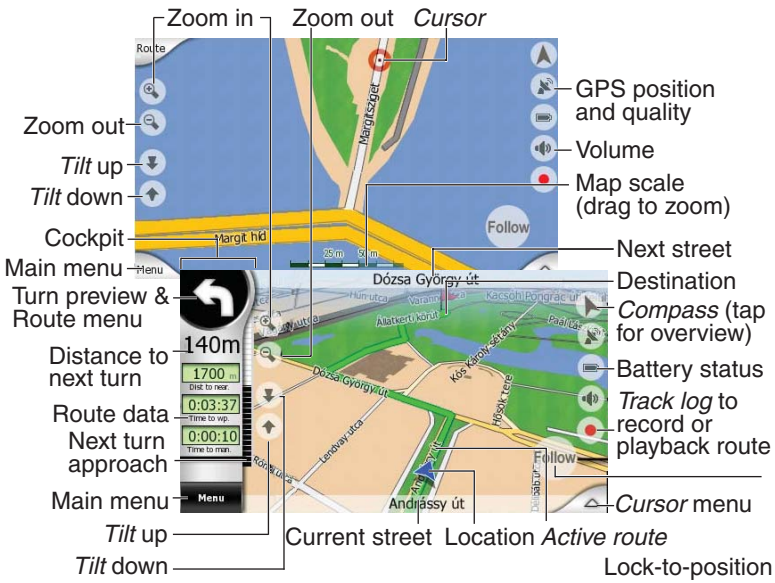

Terms in *italic* are defined as follows:

Active route: Current route. An journey may consist of multiple legs. Only one can be active.

English

Compass: Arrow pointer indicating the direction of north.

Cursor: Red bulls eye that serves as the starting point, via point, destination or POI.

Lock-to-position: State in which the blue (or yellow) arrow always represents your current global position. If you move the cursor away, the button changes from "Follow" to "Lock." Tap Lock to readjust the map so that the arrow again identifies your current global position.

POI: Point of Interest

Tilt: Gradually changing the map from 2D to 3D and vice versa.

Track log: Record of a journey, which you can replay later.

Navigation options

1. On the main navigation menu, tap **Settings**.
2. Select the grouping of options to change.

3. After making changes, tap the back button to return to the main screen. The software saves your change(s).

To restore the default values for the advanced settings, tap **Settings** > **Advanced** > **Reset Advanced Settings**.

NICE430QuickReference.indd 10-11 2/2/2007 1:03:40 PM

English

3. PLAYING MUSIC

The Secure Digital/MultiMediaCard (SD/MMC) slot on the top of the N.I.C.E. 430 supports up to a 2 GB SD card (for music and or pictures).

Inserting a SD/MMC card

Insert card with the connector toward the slot and the label side up.

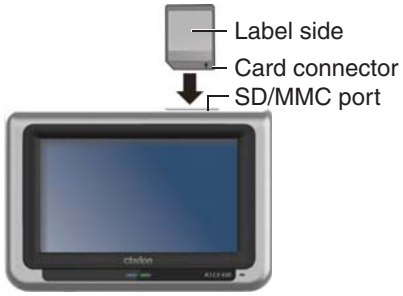

Removing a SD/MMC card

1. Make sure that no audio file is being played or no photos are being displayed by returning to the Main menu.
2. Slightly push in on the top edge of the card. The N.I.C.E. 430 releases the card.
3. Pull the card out and store it in its protective case.

Audio features

To play music, tap the Audio icon on the Main menu. The N.I.C.E. 430 displays the Audio Player controls.

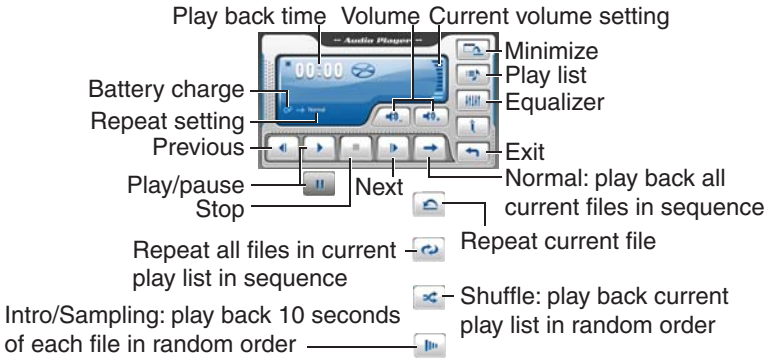

NICE430QuickReference.indd 12-13 2/2/2007 1:03:40 PM

English

Equalizer panel

Select default profile
Exit without confirmation
Confirm selection and exit
Cycle through options: Normal, Hall, 3D, Soft,
Disco, Heavy, Dance, Classic, Jazz, Pop and Rock

4. VIEWING PHOTOGRAPHS

Tap the thumbnail twice to view selected photo in full screen.

To return to the thumbnail view, tap anywhere, then tap Exit.

5. SETTINGS

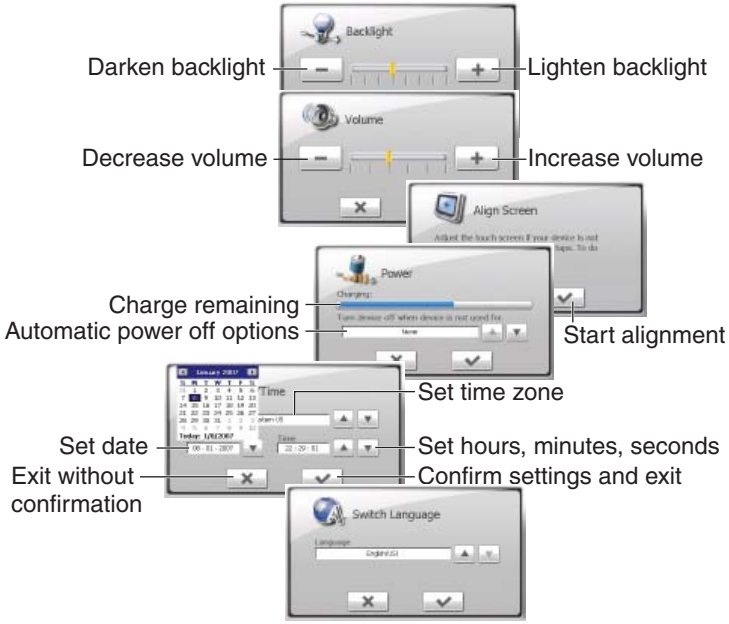

English

NICE430QuickReference.indd 14-15 2/2/2007 1:03:41 PM

English

6. Hands-free phone interface

The built-in Bluetooth phone interface works together with your Bluetooth-enabled mobile phone to provide hands-free calling.

Pairing with the phone

1. Turn on both the N.I.C.E. 430 and your mobile phone.
2. Wait for the phone to pair with the N.I.C.E. 430 or tap **Settings** > **Bluetooth icon** > **Pair mode**.
3. Initiate pairing on the mobile phone. See the owner's manual for the phone.
4. Enter the passkey (0000), if required, on both the phone and the N.I.C.E. 430.

The next time you tap **Settings** > **Bluetooth icon**, the N.I.C.E. 430 automatically searches and pairs with up to eight pre-paired phones.

English

Placing a call

1. Tap the keypad button on the Bluetooth HF Phone screen.
2. Enter the telephone number using the keypad.

When making an international call, tap and hold the 0 key to enter the + sign that appears before the country code.

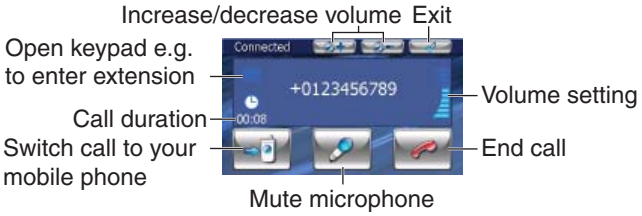

Viewing call history

Tap Call history. The N.I.C.E. 430 displays the call history screen.

1. Tap the Call history button. The N.I.C.E. 430 displays the 20 most recent incoming calls.

NICE430QuickReference.indd 16-17 2/2/2007 1:03:42 PM

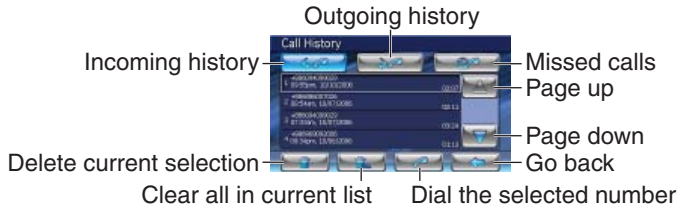

2. Tap one of the buttons at the top of the screen to display incoming or outgoing calls and missed calls.

Receiving a call

After pairing, when a call comes in, the N.I.C.E. 430 rings and displays the Incoming Call screen.

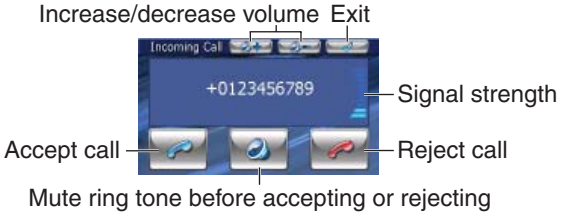

English

NICE430QuickReference.indd 18-19 2/2/2007 1:03:42 PM

Clarion Corporation of America

All Rights Reserved. Copyright © 2007: Clarion Corp. of America
Printed in China